

Panasonic

Colour Television

TX-21ET1M

TX-21ET1Z

Operating Instructions

Please read these instructions completely before operating this set

TQB4G0091

Contents

Before Operating the TV Set

Warnings and Cautions	1
Battery Installation, Replacement and Precautions	2

Locations of Control

Television Set	3
Remote Control Location (TV Operation)	4
Remote Control Location (VCR Operation)	5
Remote Control Location (TELETEXT Operation)	6

Connections

How to Connect an External Antenna	7
How to Connect the AV Input and TV Output Terminal	8

Tuning Procedures

How to Tune in Your TV Set (Automatic Search and Manual Search)	9
Fine tuning Operation	10
How to Skip Unused Programme Numbers	11

General Operations

General Operations (on the TV set)	12~13
Remote Control Operations	14~16

Contents

VCR Operations	17
Basic Teletext Operations	18~21
FAST TEXT (F.TEXT) MODE Access	22
TEXT ALARM Page Access	23
LIST MODE Access	24
SUB PAGE Access	25

 
General Informations

Troubleshooting	26
Specifications	27~28
General Informations	28


Dear Panasonic Customer

Welcome to the Panasonic family of customers. We hope that you will have many years of enjoyment from your new colour television.


Warnings and Cautions

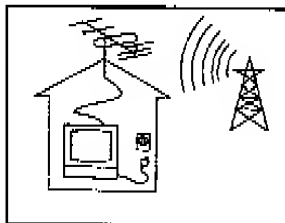

 
The TV set can be operated on
AC Auto 110 ~ 240 V, 50/60 Hz.

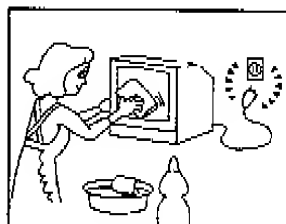

 
The cabinet and picture tube
can be kept in good condition
by simply wiping with a clean,
soft cloth moistened with mild
detergent and water. Do not
use solutions containing ben-
zol, petroleum or a chemical
cloth. For safety, remove the
plug from the wall outlet.

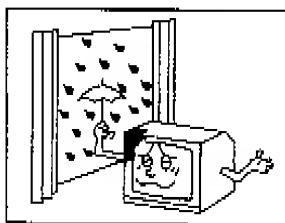

 To prevent damage which may
result in fire or electrical shock,
do not expose the TV set to rain
or excessive moisture.

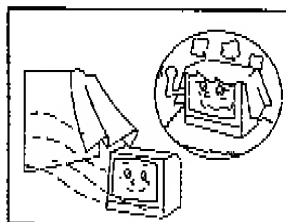


 Adequate ventilation is es-
sential to prevent failure of
electrical components.

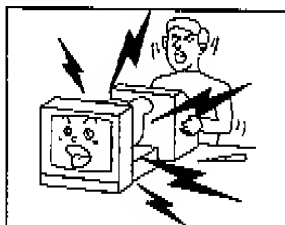


High Voltage :

 
Do not remove the rear cover,
as live parts are accessible
when it is removed.

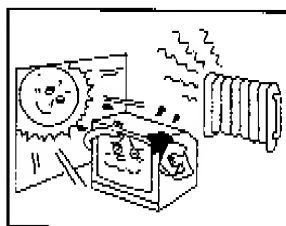

 Avoid exposing the TV set to
direct sunlight and other source
of heat.

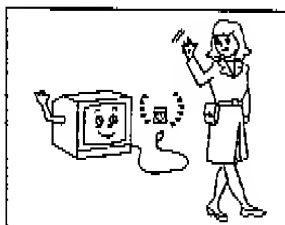

 Remove the plug from the wall
outlet (Power point) when the
TV set is not used for a pro-
longed period of time.

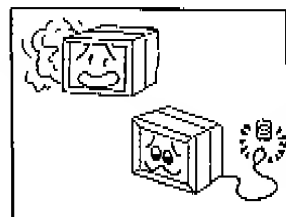


Do not used this set if abnormal
operation occurs.
EX: smoke, odd sounds or
smells, turn the power switch off
and disconnect the AC power if
you notice any unusual operation,

Battery Installation and Replacement

Battery Installation

 Batteries : Use two " R6 " size dry cells.

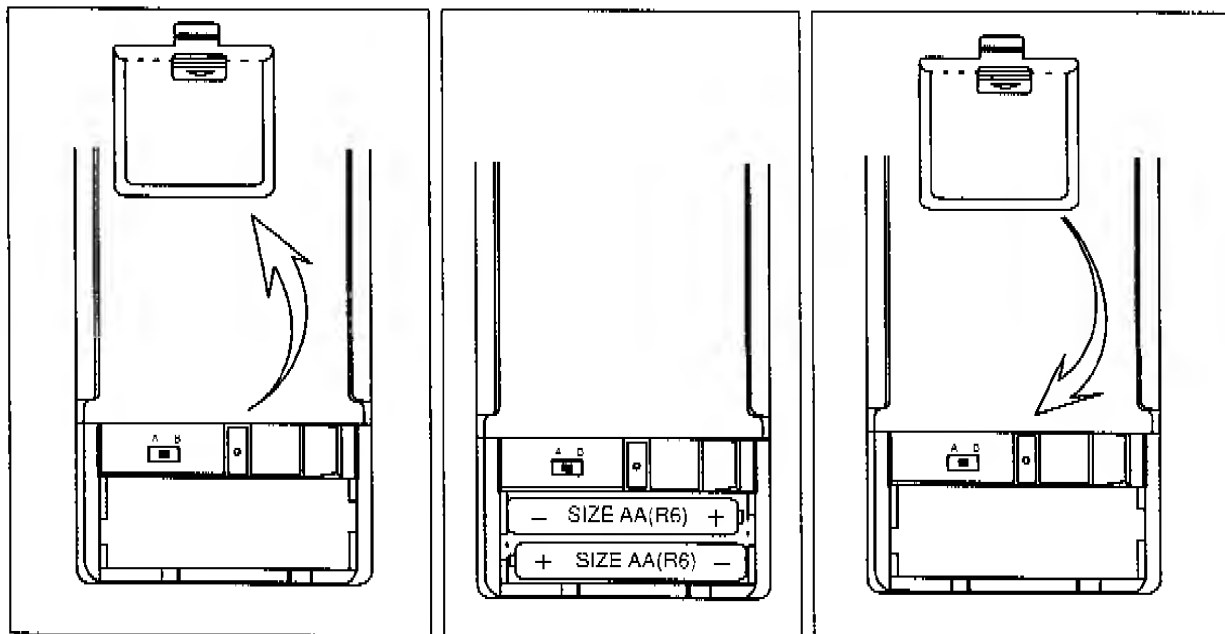


1. Remove the remote control battery compartment lid by pressing it to the bottom side.
2. Insert the batteries correctly by observing the polarities (+) and (-).
3. Replace the cover.

Battery Precautions


Incorrect use of batteries can cause electrolyte leakage which will corrode the remote control transmitter or cause the batteries to burst.

 The following precautions must be carefully observed.

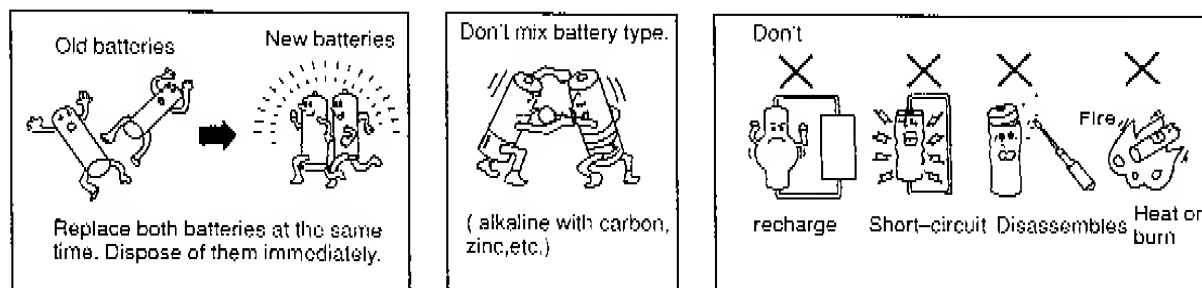


Locations of Control

 (Front View)

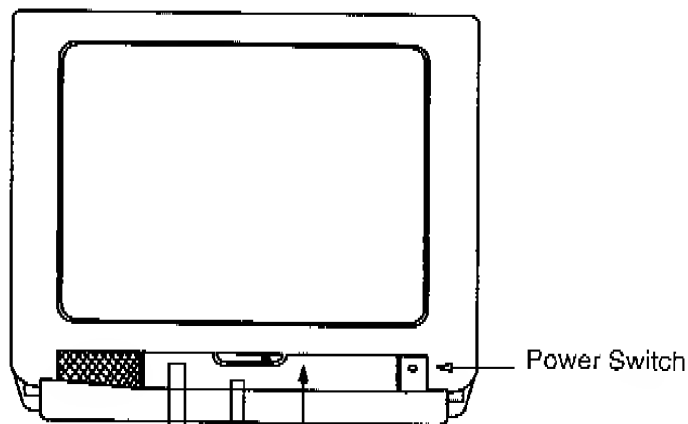


Push here to open

 

Remote Control Sensor


Power ON / Stand-by indicator

 (Behind the door)

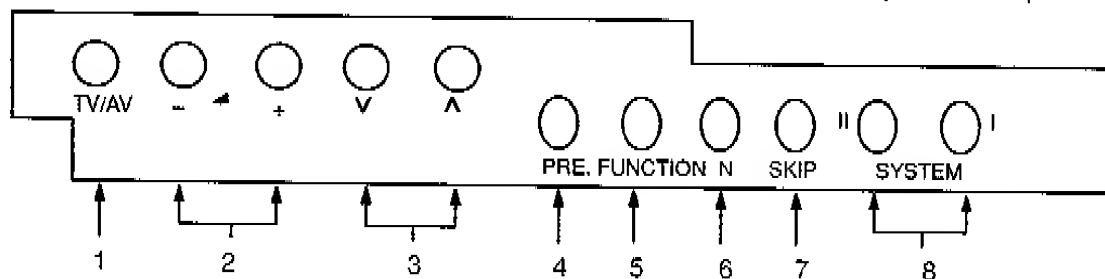


Note : Operating instruction for the numbers (1) to (8) are explained on page 12~13.

 (Rear View)

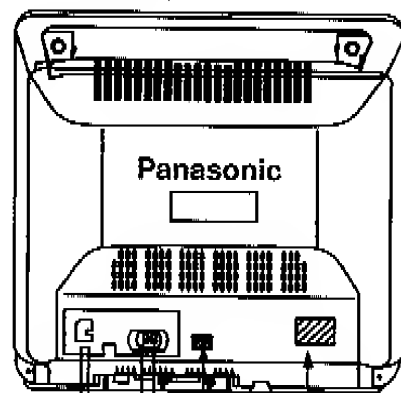


Serial Number

 Model Name Plate

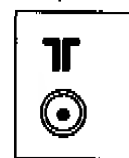


Aerial Terminal

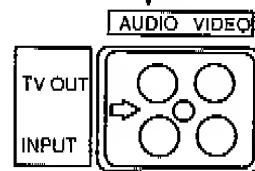 

AV Input / TV Output Terminal


Remote Control Transmitter (for TV)

 Operating instructions are explained on page 14 ~ 16.

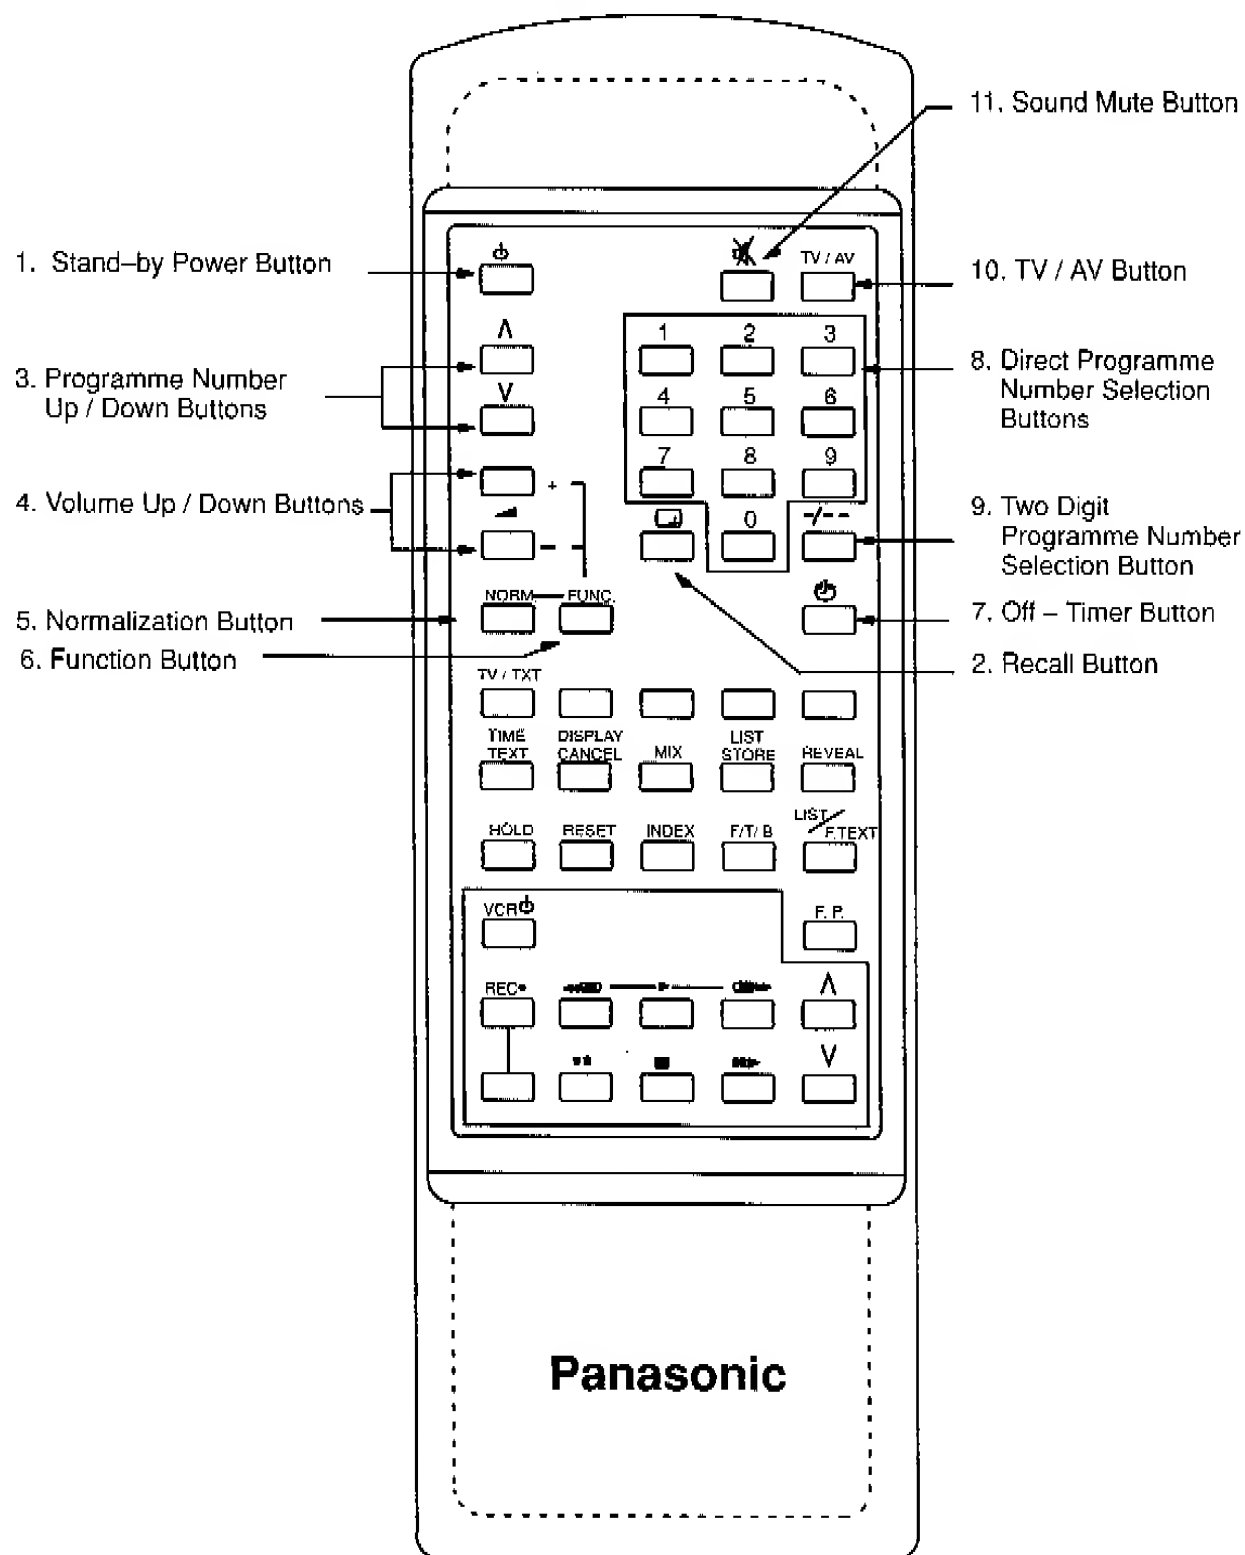


Remote Control Transmitter (for VCR)

 Operating instructions are explained on page 17.

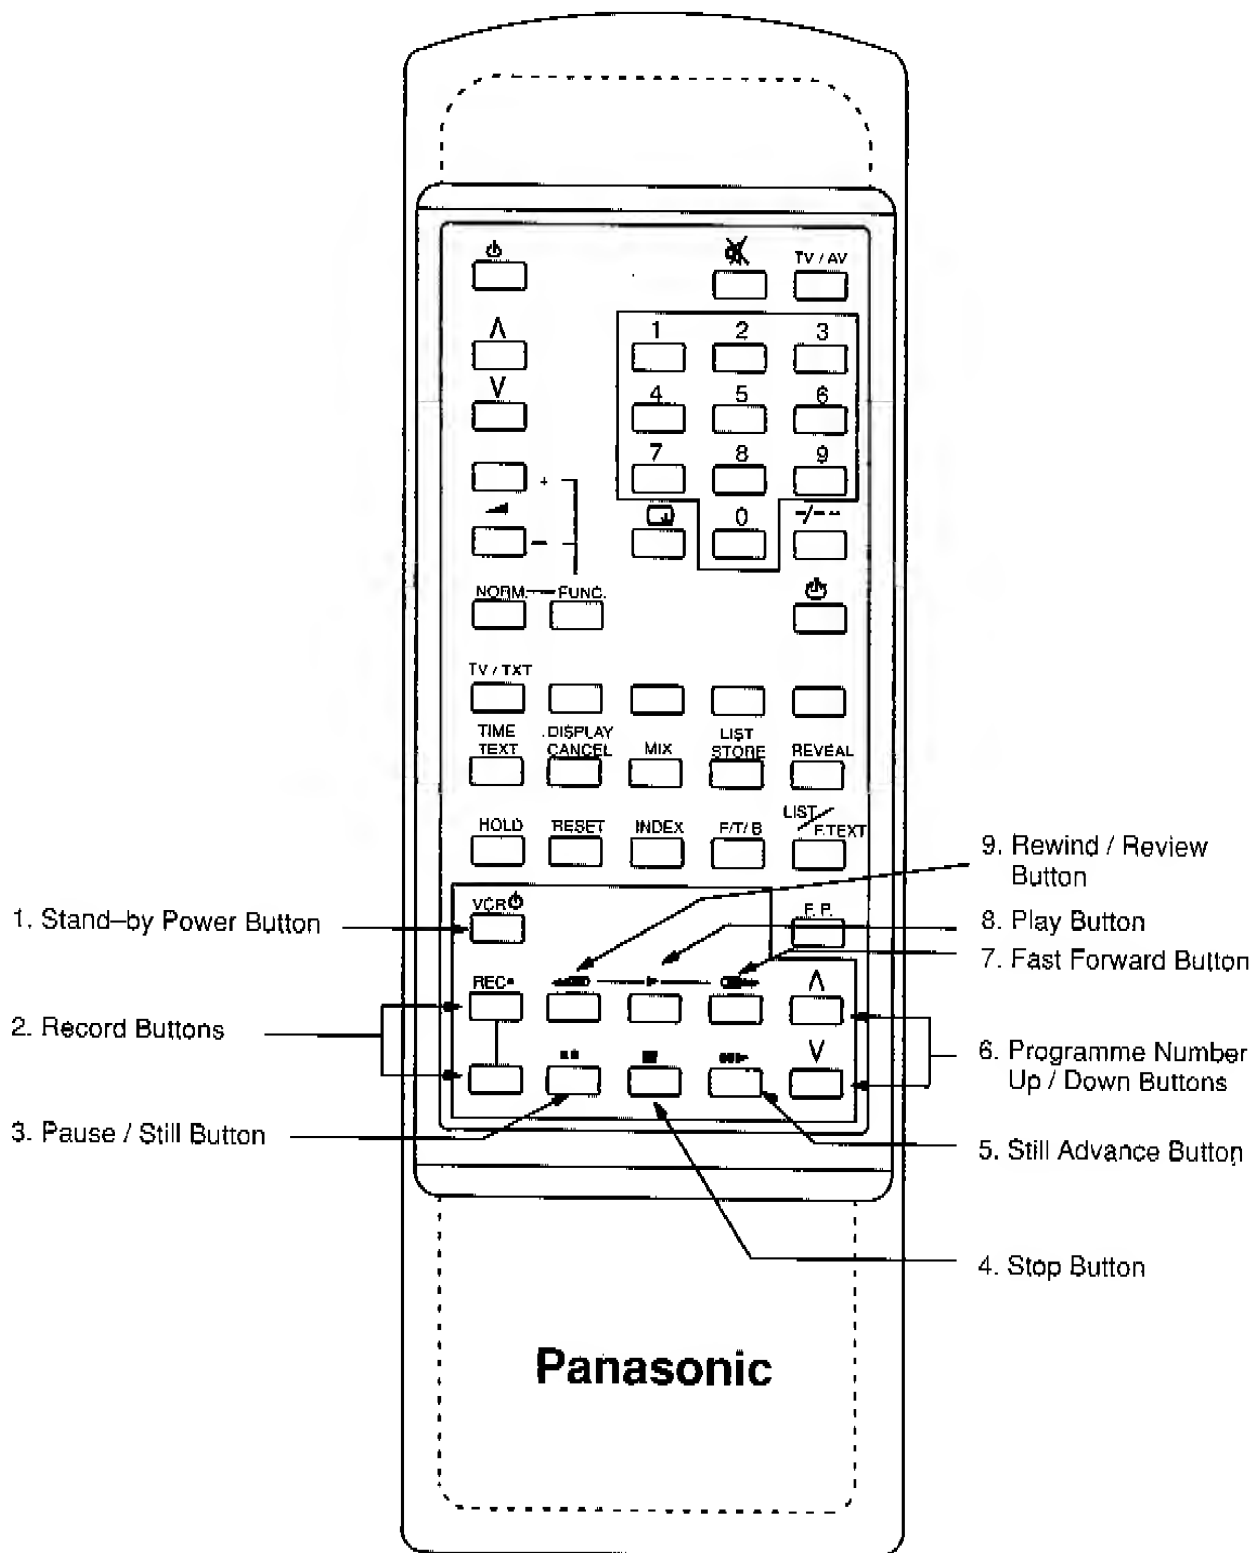

Remote Control Transmitter (for Teletext)

 Operating instructions are explained on page 18 ~ 25

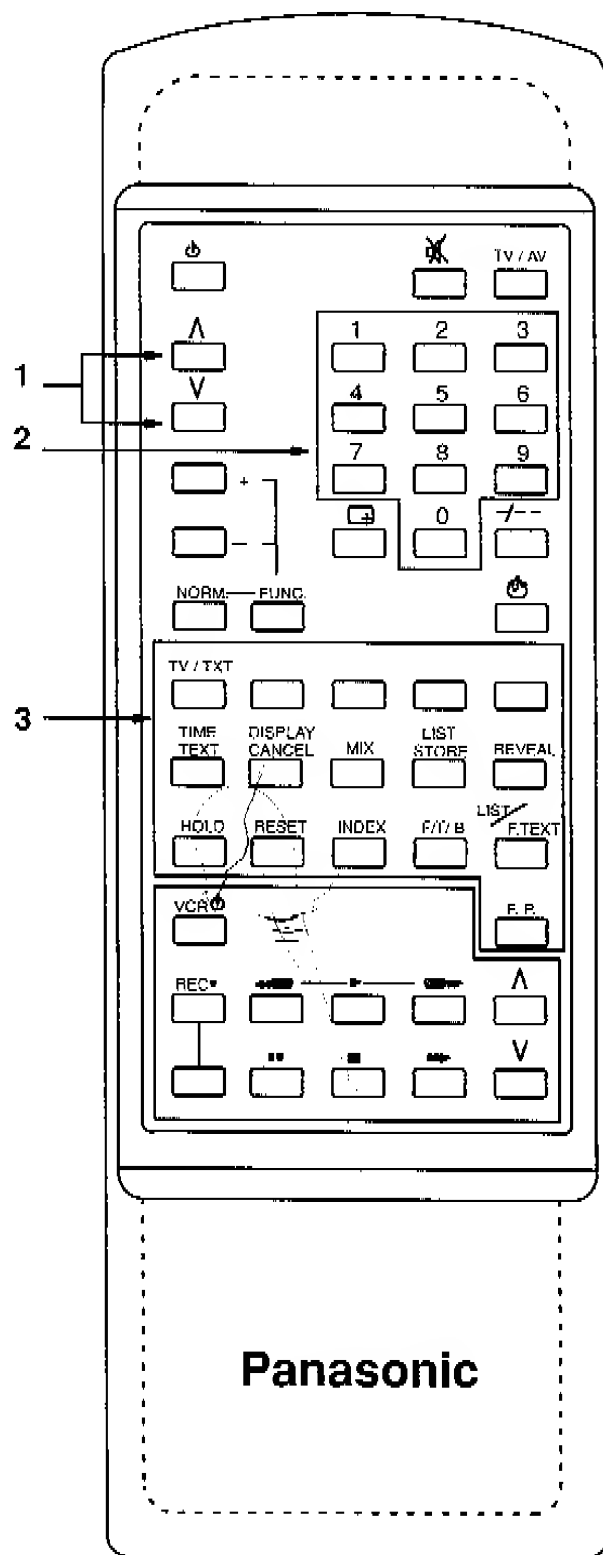

1. Programme Number Up / Down Buttons

2. Direct Programme Number Selection Buttons

3. Special Teletext Buttons :

- TV / TXT Button
- Red Button
- Green Button
- Yellow Button
- Light Blue Button
- Time Text Button
- Display Cancel Button
- Mix Button
- List Store Button
- Reveal Button
- Hold Button
- Reset Button
- Index Button
- Full / Top / Bottom (F/T/B) Button
- List / F. Text Button
- Favourite Page Button

How to Connect an External Antenna

To obtain the best quality picture and sound, an external antenna, the correct cables (75 Ohm coaxial) and the correct terminating plug will be required.

 
If a communal antenna system is used, you may require the correct connection cable and plugs between the wall antenna socket and your television receiver.

Your local Television Service Dealer may be able to assist you in obtaining the correct antenna system for your particular area and accessories required.

Any matters about antenna installation, upgrading of existing systems or accessories required, and the cost incurred, are the responsibility of the customer.

Note :

If your existing antenna system uses 300 Ohm to 75 Ohm Balun, see Below.

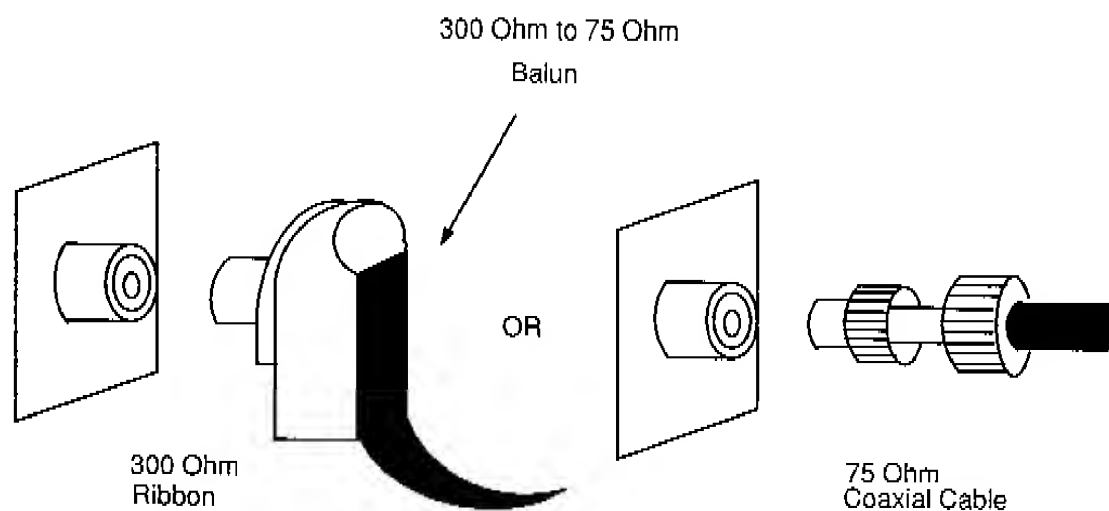

Connections (AV Input and TV Output Terminal)

1. Connection for AV input terminals (figure 1).
Set the TV / AV selection button to the AV mode.
Connect the " AV " (Audio / Video) terminals and other equipment.

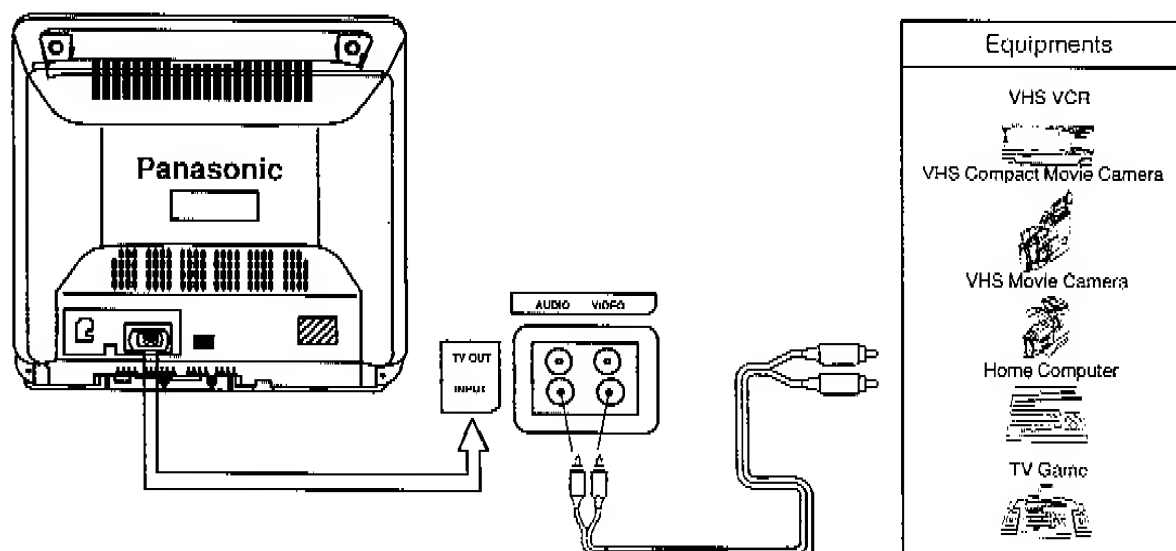 


Figure 1.

2. Connection for the TV output terminals (figure 2).
Set the TV / AV selection button to the AV mode.
Connect the playback equipment or recording equipment.

Note :

1) TV OUT : This function is specially designed to adapt non-tuner VCR for recording. Recording or broadcasting signal on TV can be done by a non-tuner VCR through the AV terminal.

2) Recording of broadcasting signal only.

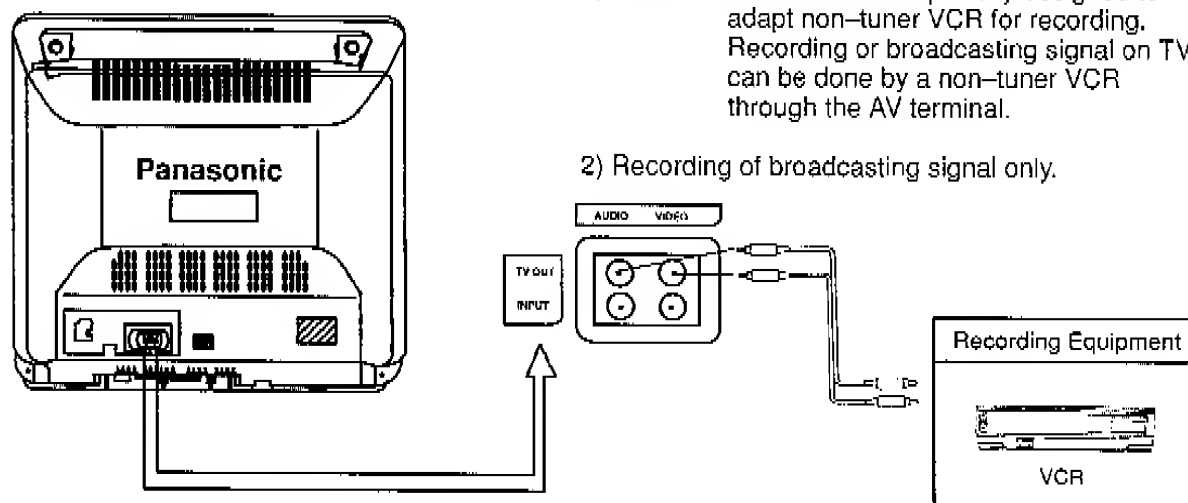 


Figure 2.

Tuning Procedure

How to Tune in Your TV Set (Automatic Search).

1. The TV set must be turned on.



2. Press the "PRE." button until the on-screen display appears as follows :


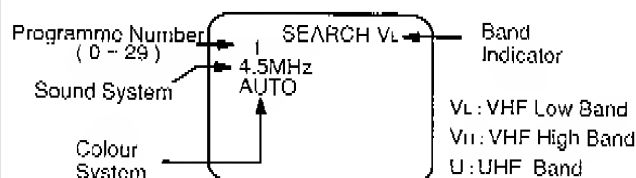 


Figure 1.

 

3. Press the "FUNCTION" button .
The on-screen display appears as shown :

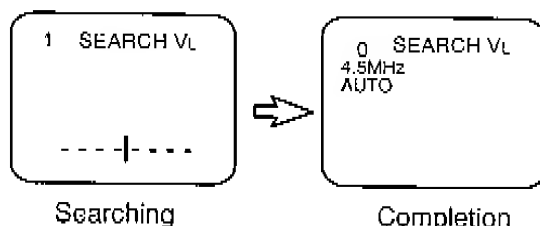

The best tuning position is automatically memorized.

4. Press the "PRE." button twice to return the TV set to the normal operating mode.

 
A maximum of 30 Programme Numbers (0-29) can be programmed.

How to Tune in Your TV Set (Manual Search).


1. The TV set must be turned on.



2. Press the "PRE." button until the on-screen display appears as shown in figure 1.

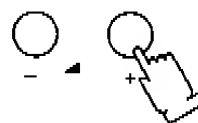

 3. Press either the Level Adjustment Up "+" or Down "-" buttons, the TV station broadcasting on the next higher or lower frequency will be automatically tuned and memorized.

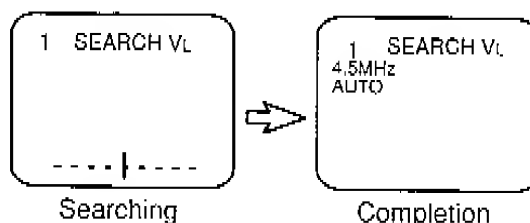

If an undesired TV station is received, press the same button again until the desired TV station is tuned.

4. Repeat step 2 and 3 to tune all the available TV stations on the remaining channel.

Ensure that a new programme number is set (step 2) before tuning the next station.

5. Press the "PRE." button twice to return the TV set to the normal operating mode.

 
Fine Tuning Operation

Under normal reception condition, this function is not used. However, in areas of poor reception or constant interference, a slight adjustment on the fine tuning can improve the picture and sound quality.


How to set the Fine Tuning Operation



1. Press the "PRE." button twice.
The on-screen will appear as shown :

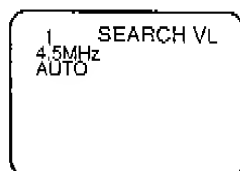

First press

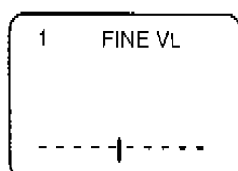 

Second press

 


2. Press either the Level Adjustment Up " + " or Down " - " button (Volume Button) continuously.

When the above fine tuning operation has been performed, the "■" symbol appear on the left of Channel Number.

The AFC function is deactivated.

AFC OFF Symbol

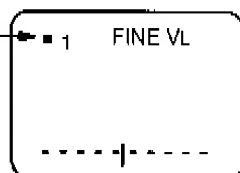



3. Press the " PRE. " button once to return the TV set to the normal operating mode.

How to cancel the Fine Tuning Operation

These procedure is used when to reset the Programme Number to the automatically tuned condition with the AFC activated.



  1. Press the " PRE. " button once.
The on-screen will appear as shown :

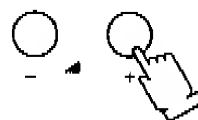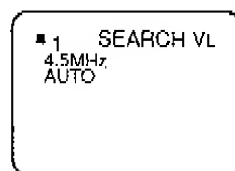

2. Press either the Level Adjustment Up " + " or Down " - " button (Volume Button).

3. Press the " PRE. " button twice.

How to Skip Unused Programme Numbers

 
Channel Skip Operation

This function makes it possible to skip the Programme Number on which no TV stations are received. This function is effective only when the Programme Number Up / Down buttons is pressed, either on the TV set or the remote control.


How to set the Skip Operation



1. Press the " PRE. " button once.
The on-screen will appear as shown below :

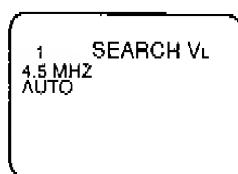


 2. Select the Programme Number you want to skip.

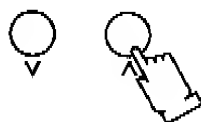

3. Press the " SKIP " button .
If more Programme Numbers are to be skipped repeat step 2 and 3.

 The on-screen appears as below :

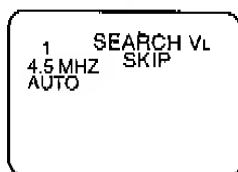

4. Press the " PRE. " button twice after the skip operation is completed.

How to cancel the Skip Operation



1. Press the " PRE. " button once.
2. Select the skipped Programme Number Up " ^ " or Down " v " button.



 
3. Press the " SKIP " button .
If more Programme Numbers are to be cancelled, repeat step 2 and 3.
4. Press the " PRE. " button twice after the cancel operation is completed.

General Operation On The TV Set

1. TV / AV Selection Button



Press the TV/AV button to change from TV mode to AV mode or vice versa.
The on-screen displays as shown below :

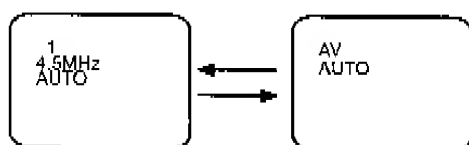

Note : When TV mode is selected, the last Programme Number, Sound and Colour System will appear on the upper left side of the screen.

2. Volume Up / Down Buttons



Press the Volume Up or Down buttons to adjust the sound level.

These buttons also can be used for level adjustment Up or Down in the Function mode.

3. Programme Number Up / Down Buttons



Press these buttons to select the higher or lower Programme Number.

The Programme Number, Sound and Colour System will appear on the upper left side of the screen.

4. Preset Button



 
This button is used for tuning.

Please refer to page 9 and 10 about this button.

5. Function Button



By pressing the Function button repeatedly, the on-screen display will be changed as shown below. If the Level Adjustment Up "+" or Down "-" is pressed, the level of the selected function can be changed.

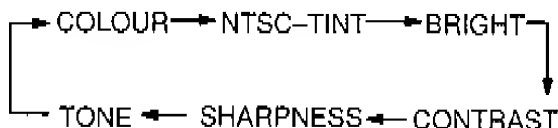

e.g. When this button is pressed.



The factory preset level (is showed in yellow colour).

Note : NTSC-TINT indicator will appear on the screen if NTSC 4.43 or NTSC 3.58 is selected.

General Operation On The TV Set

6. Normalization Button



This button is used in the function setting. When this button is pressed, all functions setting are normalized or reset to the factory preset level.

The sequence is as follows :



The factory preset level (is showed in yellow colour).

 
7. Skip Button




Note : Please refer to page 11 about the skip operation.

8. System Buttons


System I Select Operation

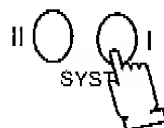

 The System button is automatically set to the AUTO mode. If a clear picture cannot be obtained when receiving broadcast or AV signal, press this button repeatedly until the optimum picture is received. Press System I button to the appropriate mode if black and white picture received is shaking slightly. When this button is pressed, you change the on-screen display as shown below :

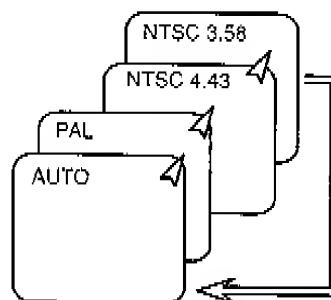

 
System II Select Operation (for TV mode only)

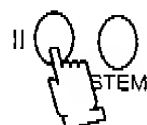

When the sound is not clear or no sound is produced on Programme Number selected, press this button repeatedly until the optimum sound is obtained.


The selected system mode on each programme number position is automatically memorized.

 The on-screen changes as follows :

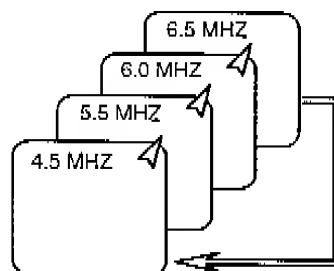


Remote Control Operation

 1. Power (Stand-by) Button

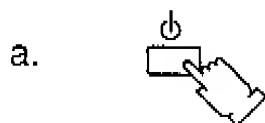


 Press this button to switch the TV set off.

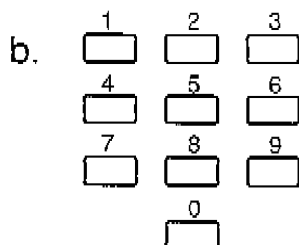

To switch back on perform one of the following:

 - Press Stand-by button again.
- Press one of these Direct Programme Number Selection buttons on the remote control.
- Press Programme Number Up / Down on the TV set or on the remote control.

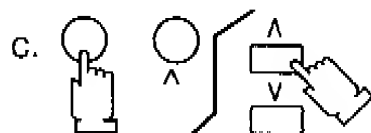

Note : Do not leave your TV set in stand-by mode for a long period of time. It is better to switch your TV off when you are away.

 
2. Recall Button



Press the Recall button to activate the on-screen display.


The current Programme Number, Sound and Colour System will be displayed on the upper left side of the screen. After few seconds, the on-screen display of Sound and Colour system will disappear automatically.

Press it again to cancel the current Programme Number.

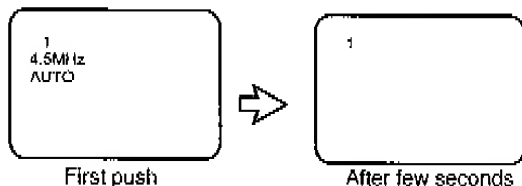

Note : In the AV mode, a blue colour screen appear, if there is no AV signal, when the recall function is off.

 3. Programme Number Up / Down Buttons

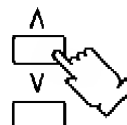

Press these buttons to select next higher or next lower Programme Number.

4. Volume Up / Down Buttons

 


Press the Volume Up or Down buttons to adjust the sound level.

These buttons also can be used for level adjustment Up or Down in the Function mode.


Remote Control Operation

5. Normalization Button

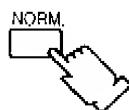


This button can be used for setting the Colour, Tint (Auto, NTSC only), Brightness, Contrast and Sharpness. When this button is pressed, all functions setting are normalized or reset to the factory preset level.

 e.g. When this button is pressed.

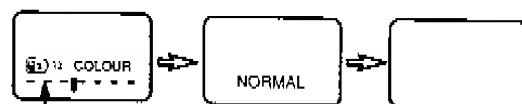


The factory preset level (is showed in yellow colour).

 6. Function Button



 By pressing the Function button repeatedly, the on-screen display will be changed as shown below. If the Level Adjustment Up "+" or Down "-" is pressed, the level of the selected function can be changed.

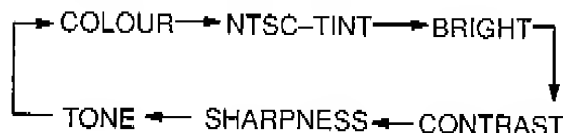

Note : NTSC-TINT will appear on the screen if NTSC 4.43 or NTSC 3.58 is selected.

 
7. Off-Timer Button



The TV set can be preset to switch off after a fixed period of time.


Press the Off-Timer button will set the TV set for 30 minutes. Press again to set 60 minutes and so on. The selected time will be displayed in the bottom right of the screen.

The sequence is as follows :

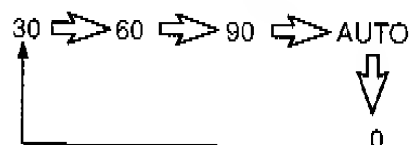

e.g. Setting 30 minutes off-timer.

 The selected time disappear after a few seconds and it's will be displayed when the Recall button is pressed. This will give you the remaining time. When the Off-Timer reaches its last 3 minutes, it start blinking before go to stand-by condition.

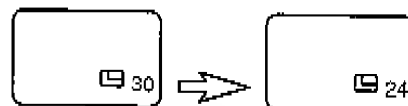

(after 6 minutes)



The selected time start blinking at last 3 minutes before stand-by condition.

Note : Setting Off - Timer to AUTO mode.

 
If the set is not switched off, when the TV station ends broadcasting, it will automatically go to stand-by condition after 5 minutes. This AUTO mode will not operate when the TV receiver is in AV mode.

Remote Control Operation

How to cancel the off-timer setting.

1. Set the pre-set time condition to "0" mode by pressing the "off-timer" button.
2. Turning the TV set off, using the button on the remote control or the power switch button on the TV set.

8. Direct Programme Number Selection Buttons

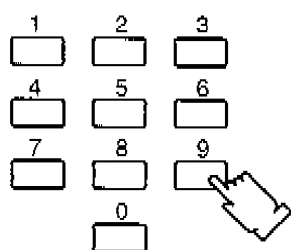



Press one of these buttons to select a Programme Number between 0 ~9.

9. Two Digit Programme Number Selection Button



To select a Programme Number between 10 – 29, press this button once, then follow by the numbers required.

  e.g. to select Programme Number 12.

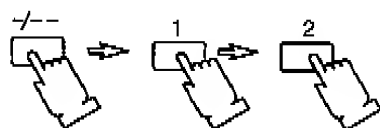

10. TV/AV Selection Button



 
Press the TV/AV button to change from TV mode to AV mode or vice versa.

11. Sound Mute Button



Press this button to mute the sound completely.

The previous sound level can be restored by pushing this button.

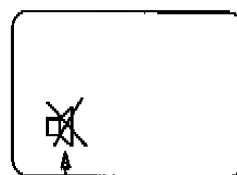

Red colour

How to cancel sound mute.

1. Press the mute button again.
2. Press the Volume Up / Down button.

 
Remote Control Operation (for VCR)

1. Power (Stand-by) Button



Press this button to switch the VCR to stand-by mode.
Press again to switch back on.

2. Rec (Record) Buttons

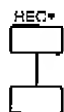

Press these buttons to record.

3. Pause / Still Button



By pressing in playback mode, the tape will be stopped temporarily.
The picture will pause.

4. Stop Button



 
Press to stop the tape.

5. Still Advance Button



While PAUSE / STILL mode, press to advance the picture one frame at a time.

6. Programme Number Up / Down Buttons



Press the Programme Number Up / Down buttons to increase or decrease the VCR program position to tune to a TV station.

7. Fast Forward Button



Press to fast forward the tape.
During the playback mode, press this button to view the picture in forward rapidly.

8. Play Button



Press to playback the tape.

9. Rewind / Review Button



 
Press to rewind the tape.
During the playback mode, press this button to view the picture in reverse rapidly.

General Operation (Teletext)

How to select TELETEXT mode.

Press ' TV/TXT ' button, **SELECT TEXT** will appear in a black bar to indicate TELETEXT availability.

On-screen appears as follows :

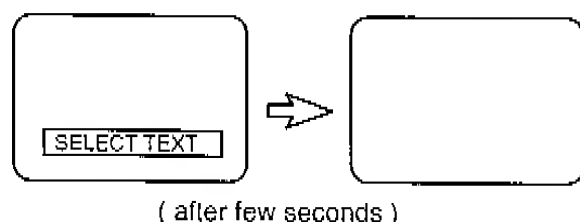

Note : A black bar briefly appears to indicate Teletext availability, when a channel is selected. If the station broadcasting Teletext has its own title transmitted in the Teletext signal for inclusion in this position, then this title will appear inside the black bar.

1. TV/TXT Button

 


Press this button to select the TELETEXT mode.
Press again to select the TV mode.

2. INDEX Button




Press this button to return to main index page.

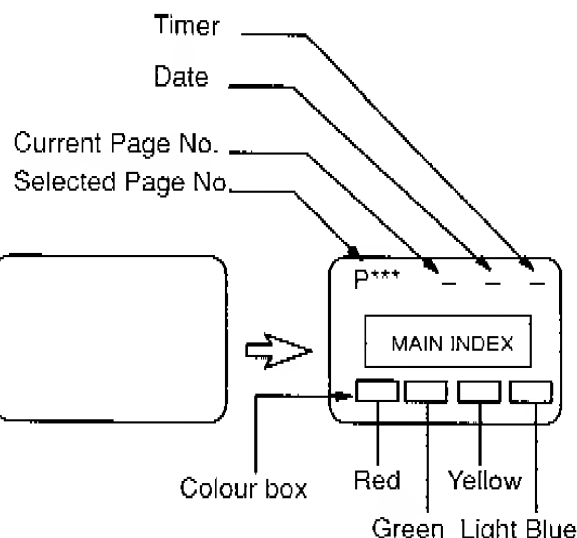


Each colour box has its own page number which can be stored by users. You can select the required page number by pressing one of these colour buttons on the remote control.

 Note : The selected page number or current page number will be displayed on the top left of the screen.

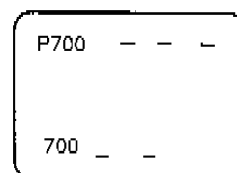

 e.g. when a red colour button on the remote control is pressed, on-screen will change as follows :

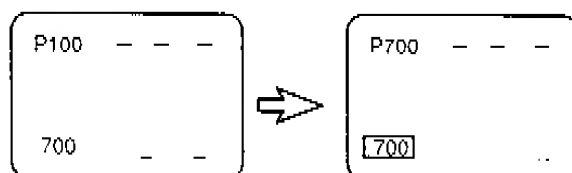


General Operation (Teletext)

3. Direct Programme Number Selection Buttons (0~9).


The required page number can be displayed instantly by pressing these buttons continuously.

 e.g. to select page number 800.

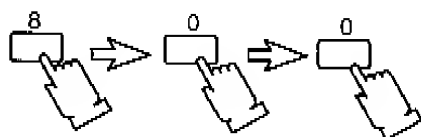

By pressing these buttons, the current page number will be changed to the selected page number.

 The sequence is as follows :

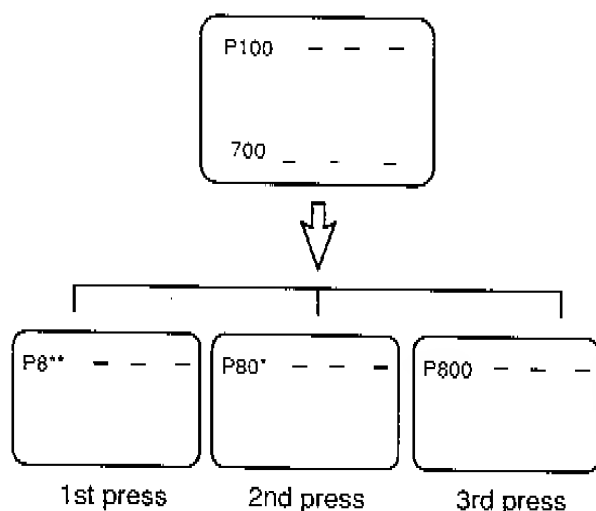

Note : All page numbers consist of 3 digits, the lowest being 100 and the highest being 899.

If the selected page is not available, the number will be blinking.

4. Page Number Up / Down Buttons



 
Press the button to select the next higher or lower teletext page.

5. Full / Top / Bottom (F/T/B) Button



This button is used when characters on the screen are hard to read.


By pressing this button, the on-screen will change as below :

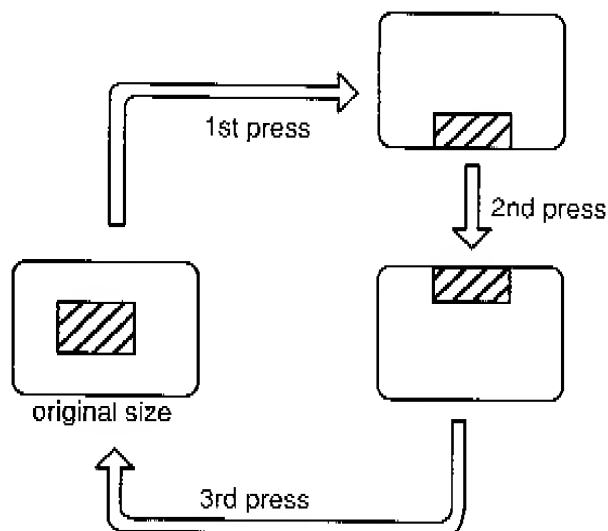

1st press – expands the upper half of the screen.
2nd press – expands the lower half of the screen.
3rd press – return it to the original size.


General Operation (Teletext)

 6. COLOUR Buttons

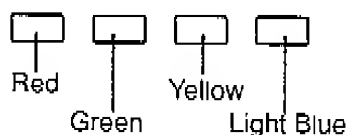


These buttons has own page number which will be displayed on the bottom of the screen. So that, the required page number can be displayed instantly by pressing one of these buttons.

 e.g. Press a red colour button.

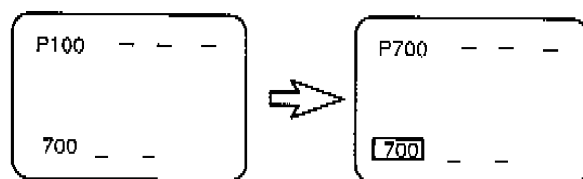

 7. RESET Button



Pressing this button in the " F.TEST " mode reset the present page to page 100 and the associated colour subject.

Pressing this button in the " LIST " mode will reset the present page to the " RED " colour coded page number.

8. MIX Button



Teletext page and the TV programme can be shown at the same time by pressing this button.

 
Press the " TV/TXT " button to reverse back to the TV programme alone.

9. HOLD Button



The selected teletext page may consist of a number of sub-pages. These sub-pages are rotated automatically, unless the ' hold ' has been activated.

Press this button to " hold " the sub-page.

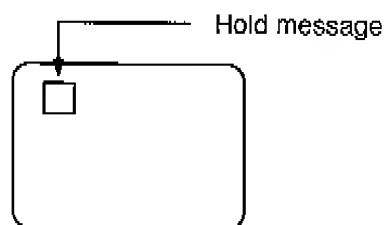


The character " Hold " will be displayed at the top left corner of the screen.

Press this button again to cancel the " Hold " command.

General Operation (Teletext)

 10. FAVOURITE PAGE (F.P.) Button

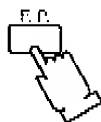

This function is used to store a favourite page in the TV memory and can be instantly recalled by pressing the button.

To store such a page the TV must be in LIST mode and the programme position must be from 0~16.

The processes can be done as follows :

1. Press the Light Blue button and choose your favourite page number.
2. Press LIST STORE button. The page number is now stored.

To recall this page (can be done on TV mode as well), press the F.P. button.

11. REVEAL Button



 
Some pages contain concealed information.

e.g. the solution to a riddle or a puzzle.

Press this button to reveal the information.
Press again to conceal the information.

12. DISPLAY CANCEL Button


(Teletext must be selected)



While a selected page is being searched for, the normal TV picture can be viewed by pressing this button.

When the page is found, the TEXT message appear on the top left corner of the screen. Press the "TV/TXT" button to display the selected page.

 
TEXT message

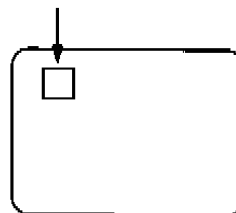

How to watch a newflash page.

1. Select a newflash page in Text mode.

 e.g. Page 300

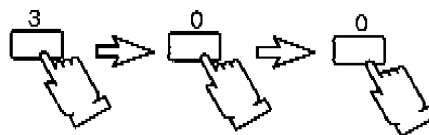

2. Press the " Display Cancel " button. The TV is switched from the Teletext page to TV broadcast.

Every time an update newflash information is available, the newflash information will be displayed at the bottom of the screen.



3. Press the " TV/TXT " button twice.

Fast Text (F. TEXT) Mode Access

 
In " F. TEXT " mode, select the desired teletext information by pressing one of the colour buttons on the remote control which correspond with the coloured subject title on the screen.

Fast Text (F. TEXT) Mode Access



(Teletext must be selected)



1. Press this button to select the " F. TEXT ".
The on -screen display is as follows :

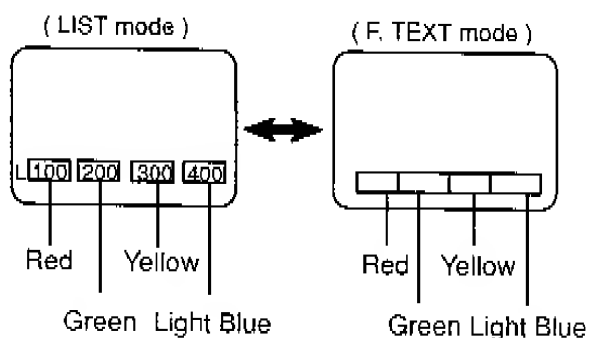

  e.g. The on-screen displays the subject titles.

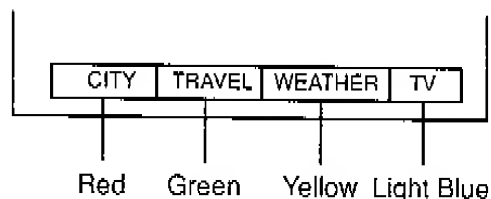

2. When one of these buttons is pressed, the subject titles page will be displayed.

e.g. By pressing the Light Blue colour button on the remote control the TV page will be viewed.

3. Follow the same procedure to access other colour -coded information pages.

 
Note :

1. Subject titles and their sequence for access are set-up by TV broadcast stations, they are not user definable with the Remote Control.
2. It is a convenient way of accessing some Teletext pages without to entering page number.

TEXT ALARM Page Access (Teletext)



This function is used for selected pages only.
e.g. The Teletext ALARM page (Refer to the subject index page for page location).

(Teletext must be selected first)

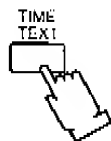


Select the text ALARM page.
Press the TIME TEXT button.

  By pressing the button, this indicator (T***) appears. It means you can enter the time at which this alarm page should be displayed using direct programme number selection buttons (0 ~ 9) on the remote control.

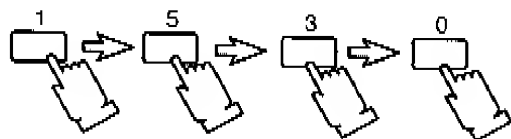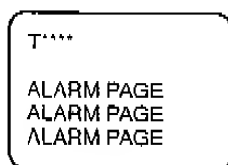

This feature uses a 24 hour clock.

 To set the alarm for 3 : 30 p.m., press numerical buttons 1, 5, 3, 0 consecutively on the remote control (as shown above). The indicator which displayed on the top corner of the screen will change to " T1530 " momentarily, then return to the current page number.

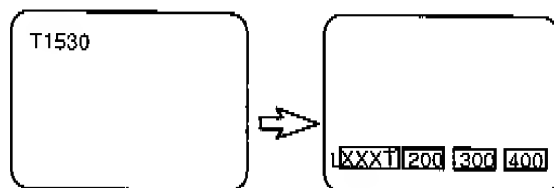

In " LIST " mode the letter " T " will appear in the current coloured box at the bottom of the screen indicating that the alarm page has been set.



Press the DISPLAY CANCEL button to view TV broadcast.

At 15 : 30 the alarm page will be displayed.

How to cancel this feature.



1. Press the " TV/TXT " button to return to normal viewing.



2. Press the " RESET " button to select other teletext page.

List Mode Access (Teletext)

List mode is a convenient way of accessing some teletext pages without the need to enter page numbers. In this mode, 4 page numbers can be preset for each Programme Number from 0 to 16. A maximum of 68 pages can be programmed. Any one of these 4 pages can be displayed instantly by pressing the corresponding " colour " Button on the Remote Control.

 
 
List Mode Page Memory Allocation

(Teletext must be selected)



1. Press this button to select the " LIST " mode. Press again to get F. TEXT mode.

The on-screen display is as follows:

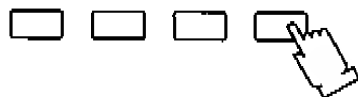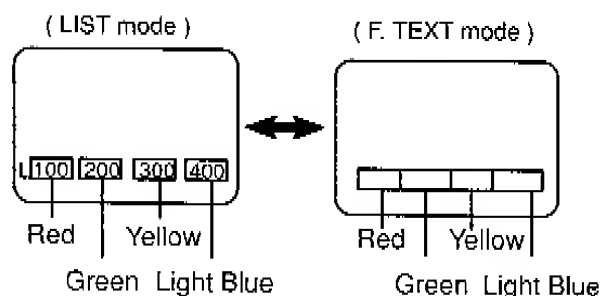

2. To select the memory position, press one of these colour buttons.



3. Enter the desired text page number by pressing numerical buttons (0 ~ 9) or Page Number Up / Down buttons on the remote control.

4. Repeat step 2 and 3 for the remaining positions if required.

Up to 4 page numbers can be preset for each programme position from 0 to 16.



5. To store these page numbers into memories, press this button and hold it until the background of the 4 numbers change to white.



6. Every time a " LIST " mode is selected, these 4 page numbers will flash until all 4 pages have been found and stored into memories.

Any one of these 4 pages can be displayed instantly by pressing the colour buttons on the remote control.

Note :

1. If a new page number is entered for viewing, it will not replace the previous number in the memory at that position unless the " LIST STORE " button is pressed and held down for a few seconds. The 4 page numbers will be reset to the preset numbers when either the "RESET" button is pressed or programme position is changed, or mode changes between " F.TEXT " and LIST MODE, or TV set is turned off.

2. The 4 preset page numbers can be changed when required, by following procedure 2 to 5 above.

3. Page numbers preset can only be performed on programme number from 0 to 16.

Text Sub Page Access

 
When a Teletext Information Page exceeds more than one screen of information, it may take some time for automatic changing of the sub-pages to reach the sub-pages as required. It is possible to enter the required sub-page and continue watching the normal programme until the correct sub-page is found.

(Teletext must be selected first).

The Required Teletext page must be selected.



When the button is pressed, this indicator "T****" will be displayed on the top left of the screen.

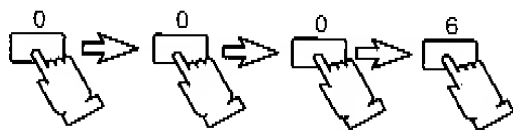


Enter the desired sub-page number while the "T****" prompt is on the screen.

Note :

As shown above sub-page selection must be inserted as a 4 Digit Number.

i.e. for sub-page 6, press the buttons "0-0-0-6" continuously.

 The screen will change as shown :

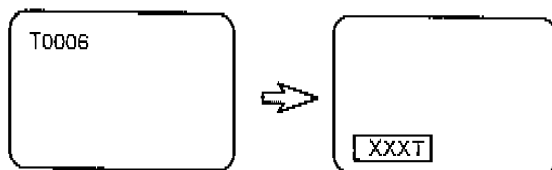

In "LIST" mode the letter "T" will appear in the current coloured box at the bottom left side of the screen. This is an indication that the sub-code has been set.

Note :

 
If no sub-page exists for the page for which this function has been set, the system will wait indefinitely until it has been cancelled.



Press this button to view the normal TV mode.

When the desired sub-page is received, the "TEXT" message appears on the top left of the screen.

TEXT message

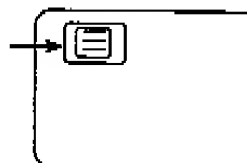

TV / TEXT



Press the TV / TEXT twice to display the received sub-page.





 













 

To clear the sub-coded page, enter a new page number or press the "RESET" button.

Note :

It is not possible to select another Programme Number during sub-page operation, without cancelling the sub-page search operation.

Troubleshooting

Before calling for service, determine the symptoms and make a few simple checks as shown below.

Symptoms		Checks
Picture	Sound	
 Snowy Picture	 Noisy Sound	Aerial Location, direction Connection
 Multiple Image	 Normal Sound	Aerial Location, direction Connection
 Interference	 Noisy Sound	Electrical Appliances Cars / Motorcycles Fluorescent Lamps
 Normal Picture	 No Sound	Volume (Check whether the mute function has been activated on the Remote Control.)
 No Picture	 No Sound	Not plugged into AC outlet Not switched on Contrast and Brightness / Volume Setting (Check by pushing the Power Switch or Stand-by Button on the Remote Control.)
 No Colour	 Normal Sound	Colour Control
 Scrambled	 Normal or Weak Sound	Re-tune Channels
 Colour Patches	 Normal Sound	Magnetic interference from unshielded equipment. Receiver moved while "ON".
 No Colour	 Rolling Picture	 H-Line
		System Button
		 Noisy Sound

Specifications

Power Source

AC Auto 110 ~ 240 V, 50 / 60 Hz

Power Consumption

108 W,
8 W (Stand-by Condition)

Receiving System

System	Function
PAL B,G PAL I PAL D NTSC M	Reception of broadcasts and Playback from Video Tape Recorders
NTSC 4.43 / 5.5MHz NTSC 4.43 / 6.0MHz NTSC 4.43 / 6.5MHz NTSC 3.58 / 5.5MHz NTSC 3.58 / 6.0MHz NTSC 3.58 / 6.5MHz	Playback from Special Video Tape Recorders
PAL 60Hz / 5.5MHz PAL 60Hz / 6.0MHz PAL 60Hz / 6.5MHz	Playback from Special Disc Players

Receiving Channels

Regular TV	VHF BAND 2 - 12 1 - 12 1 - 11 1 - 12 2 - 13	PAL B, G PAL D PAL B NTSC M Japan NTSC M U.S.A
	UHF BAND 21 - 69 28 - 69 13 - 56 13 - 62 14 - 69	PAL B,G I PAL G (Australia) PAL D NTSC M Japan NTSC M U.S.A.
	CATV	S1-S20

Specifications

Picture Tube

54 cm (21 inches) – (TX-21ET1M)
51 cm (21 inches) – (TX-21ET1Z)
Measured diagonally, 90° deflection.

Audio Output

3 W (Max.)

Aerial Impedance

75 Ω Unbalanced coaxial

Video / Audio Terminals

AV In	Video In	1 Vp–p. 75 Ω
	Audio In	Approx. 400mV
TV Out	Video Out	1 Vp–p. 75 Ω
	Audio Out	Approx. 400mV

Dimensions (W x D x H)

509 x 492 x 469 mm

Weight

21.50 Kg

Note :

Design and Specifications are subject to change without notice.
Weight and Dimensions shown are approximate.

General Information

1. If the set is not switched off when the TV stations stop transmitting at the end of the evening, it will automatically go to stand-by mode after 5 minutes, only in Auto shut-off mode. This function will not operate when the TV is in AV mode.
2. Before calling for service, please refer to the troubleshooting guide on page 26 to determine the symptoms.
3. VCR Mode Select Switch is located on the rear side of the remote control. Please set to " A " when using National/Panasonic VCR. If operation cannot be carried out, set to " B ".

Matsushita Electric Industrial Co., Ltd.

Central P.O. Box 288, Osaka 530-91, Japan